
## **STELLA 4 S.S.LED**

INSTALLATION INSTRUCTIONS OF LUMINAIRE STELLA 4 S.S.LED

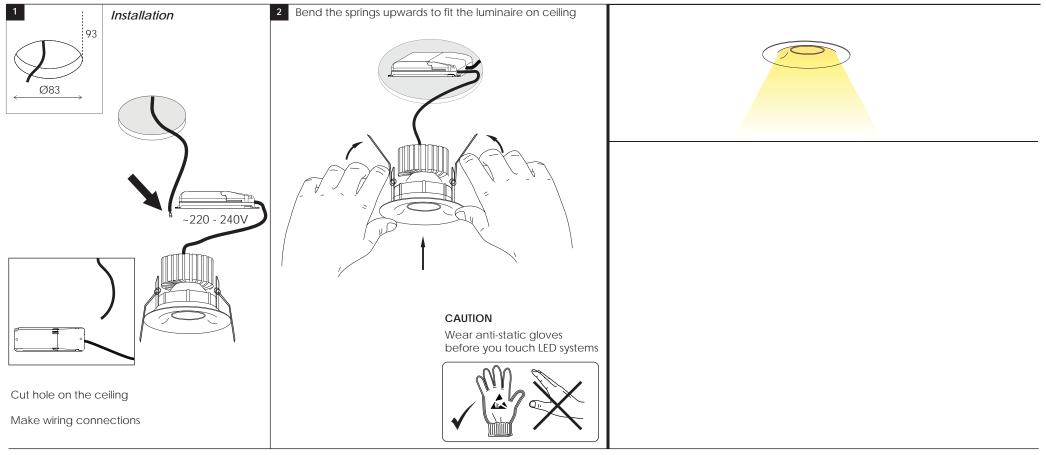

## USER INSTRUCTIONS

 
- •The installation of the unit must be done by a qualified electrician.
- •The unit must be earthed in case an earth connecting point exists.
- •Ensure that the mains is switched off during servicing.
- Do not use bulb(s) bigger than the indicated on units name-plate or packaging.
- Ensure that after the installation, the unit is properly fixed and the cable clamps (if exist) are well tightened.
- •Manufacturer will not accept liability for injury or damage resulting from incorrect use or installation
- •The unit is not intended to operate in loop connection.
- •Wall plugs and terminals are not included.
- •LED modules are replaced only by the manufacturer.



www.bright.gr

Factory: 5 Kefalovrisou Str., Monomati, Acharnai, P.O. Box 13677, Athens, Greece Tel: (+30) 210 6208 230 Fax: (+30) 210 62 08 262

**CAUTION** Replace any cracked shield





Last updated: October 2016



