

# ARTUS SQUARE

INSTALLATION INSTRUCTIONS FOR LUMINAIRE ARTUS SQUARE

<p><b>1</b> <b>Installation</b></p> <p>86 x 86</p> <p>125</p> <p>Cut hole on ceiling</p>	<p><b>3</b> Secure the fitting on ceiling with two (2) screws</p>	<p><b>4</b></p> <p>After installing the fitting you will need filling material to fill the gaps on ceiling. Then paint the ceiling.</p>	<p>Rotation: 20° vertical, 360° horizontal</p>	
<p><b>2</b> Place the fitting in the ceiling</p>	<p><b>5</b></p>	<p><b>6</b> A. Place the lamp to the inner component. B. Bend the spring to secure the lamp.</p> <p>A B</p>	<p><b>ARTUS TYPES:</b></p> <p>ARTUS 1      ARTUS 2      ARTUS 3      ARTUS 4</p>	
<p>(ii) Release inner component. Turn it until you reach the gaps</p>				

## USER INSTRUCTIONS

- The installation of the unit must be done by a qualified electrician.
- The unit must be earthed in case an earth connecting point exists.
- Ensure that the mains is switched off during servicing.
- Do not use bulb(s) bigger than the indicated on units name-plate or packaging.
- Ensure that after the installation, the unit is properly fixed and the cable clamps (if exist) are well tightened.
- Manufacturer will not accept liability for injury or damage resulting from incorrect use or installation
- The unit is not intended to operate in loop connection.
- Wall plugs and terminals are not included.



Last updated: May 2016