

# ARTUS

## INSTALLATION INSTRUCTIONS FOR LUMINAIRE ARTUS

**1** *Installation*

Ø86  
120

Cut hole on ceiling  
Make wiring connections

INPUT ~230V  
OUTPUT 12V

(ii) Release inner component. Turn it until you reach the gaps

**2** *Place the fitting in the ceiling*

**3** *Secure the fitting on ceiling with two (2) screws*

**6** *Connect with lampholder. Insert inner part in the fitting (as shown in step 1 (ii))*

Rotation: 20° vertical, 360° horizontal

**4**

After installing the fitting you will need filling material to fill the gaps on ceiling. Then paint the ceiling.

**5** *A. Place the lamp to the inner component. B. Bend the spring to secure the lamp.*

**A**      **B**

**ARTUS TYPES:**

ARTUS 1      ARTUS 2      ARTUS 3      ARTUS 4

### USER INSTRUCTIONS

- The installation of the unit must be done by a qualified electrician.
- The unit must be earthed in case an earth connecting point exists.
- Ensure that the main supply is switched off during servicing.
- Do not use bulb(s) bigger than the indicated on units name-plate or packaging.
- Ensure that after the installation, the unit is properly fixed and the cable clamps (if exist) are well tightened.
- Manufacturer will not accept liability for injury or damage resulting from incorrect use or installation
- The unit is not intended to operate in loop connection.
- Wall plugs and terminals are not included.



Date issued: May 2014