


FLUXUS S T LED

INSTALLATION INSTRUCTIONS FOR LUMINAIRE FLUXUS S T LED

1 **Installation** Cut hole on ceiling

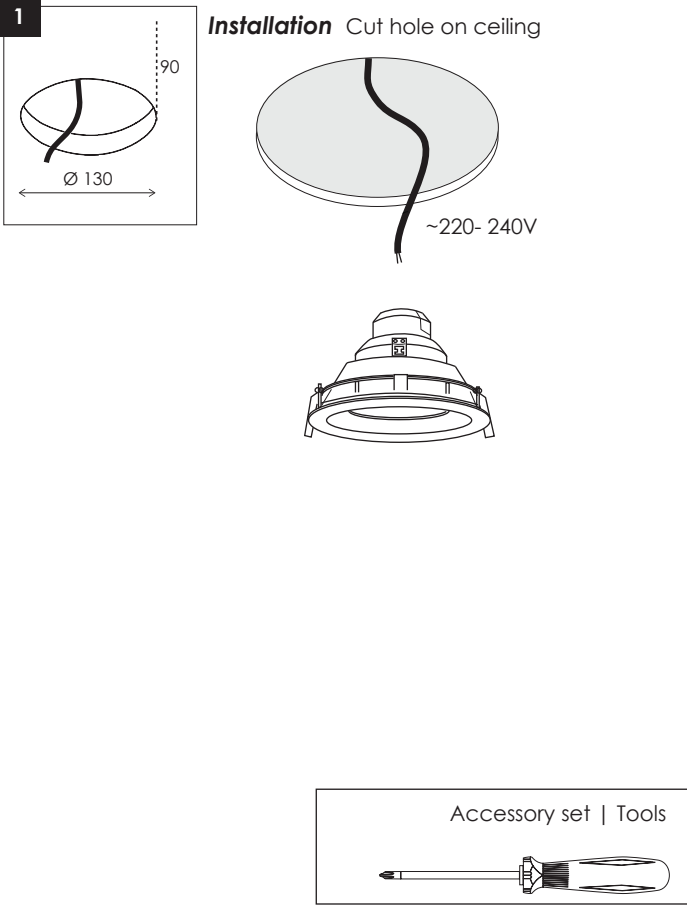

Ø 130


90

~220-240V

Accessory set | Tools


2 **Make wiring connection**

Access the box

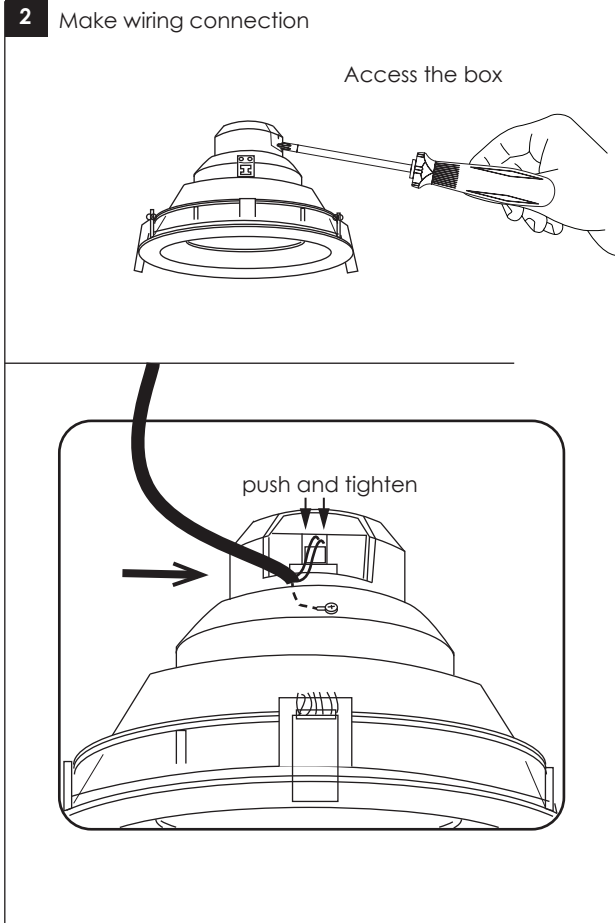

push and tighten

3 **Bend the springs to insert fitting in the false ceiling**

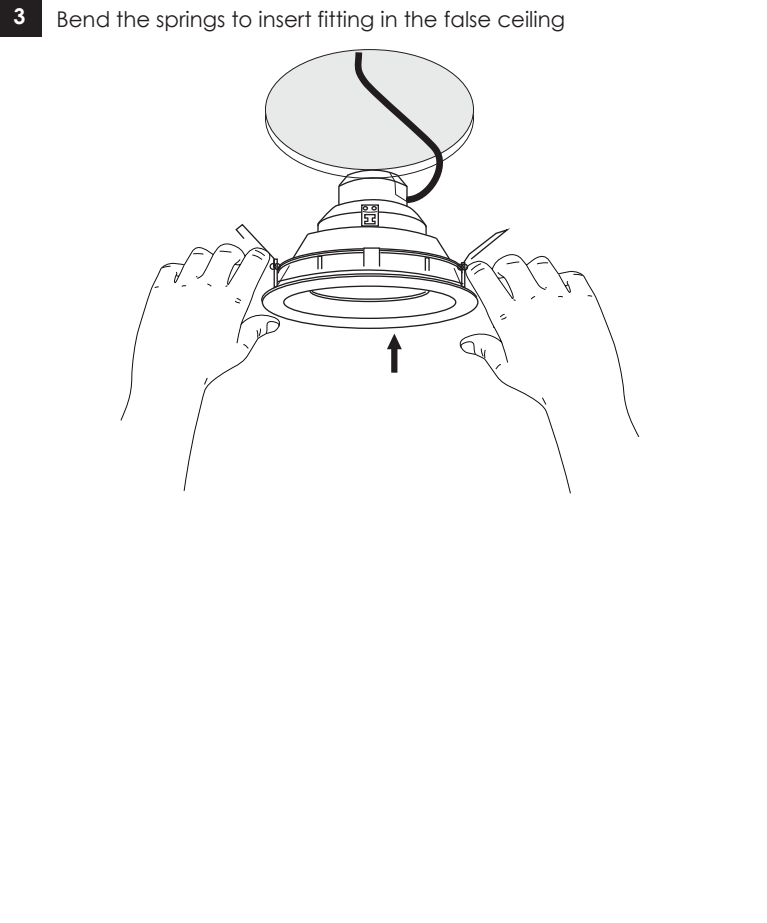

USER INSTRUCTIONS

- The installation of the unit must be done by a qualified electrician.
- The unit must be earthed in case an earth connecting point exists.
- Ensure that the mains is switched off during servicing.
- Do not use bulb(s) bigger than the indicated on units name-plate or packaging.
- Ensure that after the installation, the unit is properly fixed and the cable clamps (if exist) are well tightened.
- Manufacturer will not accept liability for injury or damage resulting from incorrect use or installation
- The unit is not intended to operate in loop connection.
- Wall plugs and terminals are not included.
- LED modules are replaced only by the manufacturer.



Last updated: October 2016/2