 
 
MINI TALUS 1F


INSTALLATION INSTRUCTIONS FOR LUMINAIRE MINI TALUS 1F








a Cut the hole

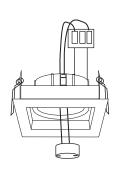


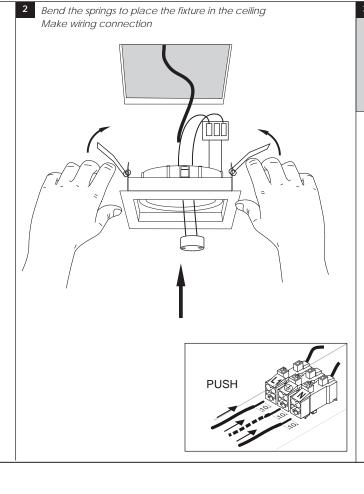




Place /replace lamp

 Bend the main spring to release the glass and access the reflector



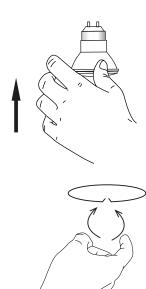



- •The installation of the unit must be done by a qualified electrician.
- •The unit must be earthed in case an earth connecting point exists.
- Ensure that the mains is switched off during servicing.
- •Do not use bulb(s) bigger than the indicated on units name-plate or packaging.
- Ensure that after the installation, the unit is properly fixed and the cable clamps (if exist) are well tightened.
- Manufacturer will not accept liability for injury or damage resulting from incorrect use or installation
- •The unit is not intended to operate in loop connection.
- Wall plugs and terminals are not included.
- •LED modules are replaced only by the manufacturer.



Last updated: July 2016











