

# HONOR M- T FLUXUS WHITE OPTIC LED

## installation instructions

⌚ indoor/ downlight recessed spots



**1 Installation** Cut hole on ceiling

$\leq 25W$      $> 25W$   
**a** 25mm    40mm  
**b** 100mm    150mm

Accessory set | Tools

**2 Make wiring connection**

Access the box

push and tighten

**3 Bend the springs to insert fitting in the false ceiling**

**4 Maintenance / Glass replacement**

OPEN/CLOSE


**CAUTION**  
Replace any cracked shield

**USER INSTRUCTIONS**

- The installation of the unit must be done by a qualified electrician.
- The unit must be earthed in case an earth connecting point exists.
- Ensure that the mains is switched off during servicing.
- Do not use bulb(s) bigger than the indicated on units name-plate or packaging.
- Ensure that after the installation, the unit is properly fixed and the cable clamps (if exist) are well tightened.
- Manufacturer will not accept liability for injury or damage resulting from incorrect use or installation
- The unit is not intended to operate in loop connection.
- Wall plugs and terminals are not included.
- LED modules are replaced only by the manufacturer.

**CAUTION**

Wear anti-static gloves before you touch LED systems

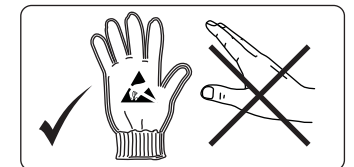

**Factory**

5 Kefalovrisou Str., Monomati, Acharnai, P.O. Box 13677, Athens, Greece | Tel: (+30) 210 6208 230  
E-mail: info@bright.gr | www.bright.gr

