 

## installation instructions

## FUGA 2 RING


(a) indoor/ profiles




Ø600 | Ø800 | Ø1000 | Ø1200 | Ø1400 | Ø1600 | | Ø1800 | | Ø2000

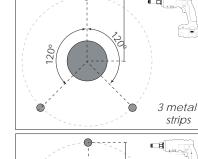



Make holes.

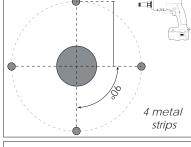

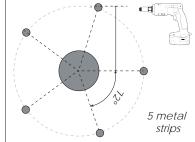



2 Screw on ceiling the metal strips.

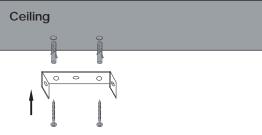

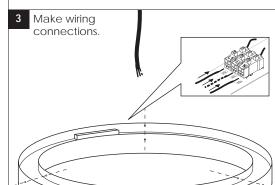



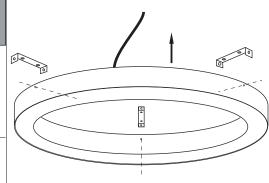

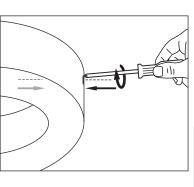





**Tools** 

- •The installation of the unit must be done by a qualified electrician.
- •The unit must be earthed in case an earth connecting point exists.
- •Ensure that the mains is switched off during servicing.
- Do not use bulb(s) bigger than the indicated on units name-plate or packaging.
- Ensure that after the installation, the unit is properly fixed and the cable clamps (if exist) are well tightened.
- Manufacturer will not accept liability for injury or damage resulting from incorrect use or installation

OFF

- •The unit is not intended to operate in loop connection.
- ·Wall plugs and terminals are not included.
- •LED modules are replaced only by the manufacturer.

## CAUTION

Wear anti-static gloves before you touch LED systems.



## CAUTION

Replace any cracked shield.









5 Kefalovrisou Str., Monomati, Acharnai, P.O. Box 13677, Athens, Greece | Tel: (+30) 210 6208 230 E-mail: info@bright.gr | www.bright.gr











