
TERES 5

 
INSTALLATION INSTRUCTIONS FOR LUMINAIRE TERES 5

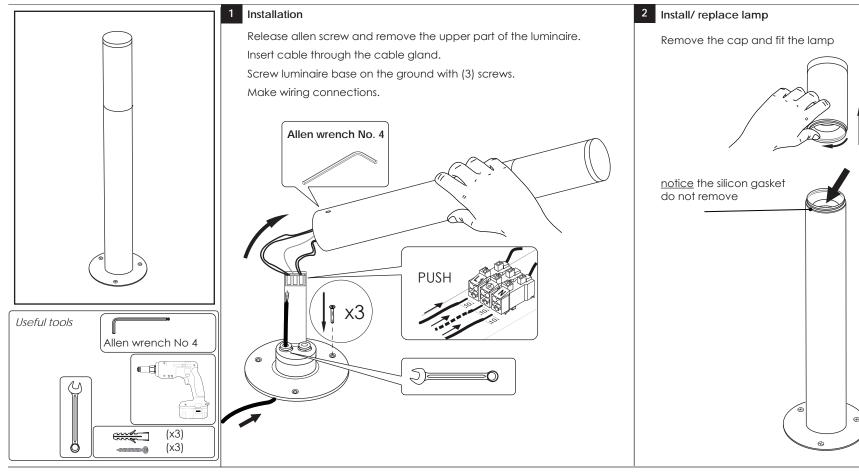

USER INSTRUCTIONS

- •The installation of the unit must be done by a qualified electrician.
- •The unit must be earthed in case an earth connecting point exists.
- •Ensure that the mains is switched off during servicing.
- •Do not use bulb(s) bigger than the indicated on units name-plate or packaging.
- Ensure that after the installation, the unit is properly fixed and the cable clamps (if exist) are well tightened.
- Manufacturer will not accept liability for injury or damage resulting from incorrect use or installation
- •The unit is not intended to operate in loop connection.
- Wall plugs and terminals are not included.

CAUTIONReplace any cracked shield









Last updated: July 2016





Fit the lamp



