
TERES M2

INSTALLATION INSTRUCTIONS FOR LUMINAIRE TERES M2

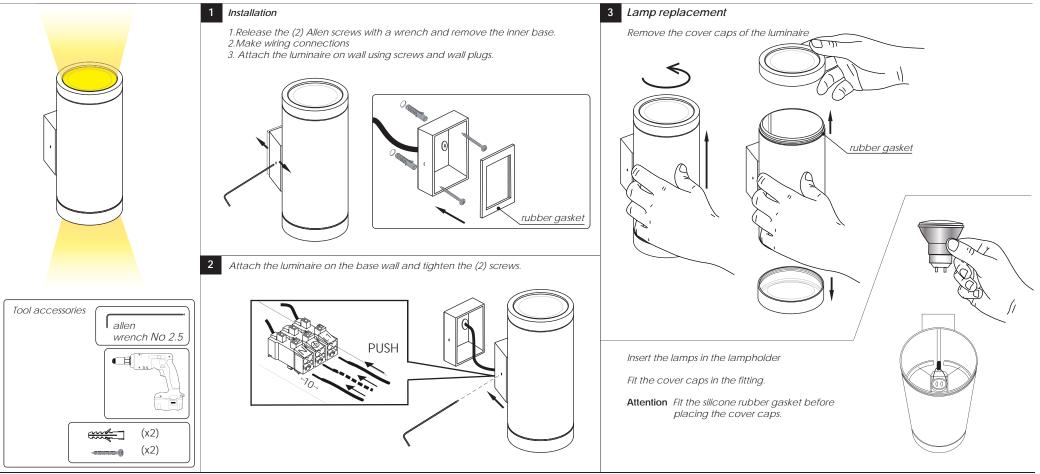

USER INSTRUCTIONS

B

- •The installation of the unit must be done by a qualified electrician.
- •The unit must be earthed in case an earth connecting point exists.
- •Ensure that the mains is switched off during servicing.
- Do not use bulb(s) bigger than the indicated on units name-plate or packaging.

 
www.bright.gr

- •Ensure that after the installation, the unit is properly fixed and the cable clamps (if exist) are well tightened.
- Manufacturer will not accept liability for injury or damage resulting from incorrect use or installation
- •The unit is not intended to operate in loop connection.
- Wall plugs and terminals are not included.

LIGHTING



CAUTION



IP65 🕱 C E

Date Issued: December 2014



Factory: 5 Kefalovrisou Str., Monomati, Acharnai, P.O. Box 13677, Athens, Greece Tel: (+30) 210 6208 230 Fax: (+30) 210 62 08 262

