

FUSUS S TRIM SSLED

⊖ indoor/ downlight recessed spots



1

105
Ø50

Installation

INPUT ~220-240V

OFF

OFF

Cut hole on ceiling

Remote electronic driver

Measure the false ceiling thickness and fit the metal strips on the fixture. Tighten the screws.

2x

2 Place the fitting in the ceiling

3 Secure the fitting on ceiling with two (2) screws. Hold the fixture body while you use the drill.

4

After installing the fitting you will need filling material to fill the gaps on ceiling. Then paint the ceiling.

5

INPUT ~220-240V

Make wiring connections

holder slot

Fit the inner part in the fixture and rotate until the inner fitting locks into place.


ON

USER INSTRUCTIONS

- The installation of the unit must be done by a qualified electrician.
- The unit must be earthed in case an earth connecting point exists.
- Ensure that the mains is switched off during servicing.
- Ensure that after the installation, the unit is properly fixed and the cable clamps (if exist) are well tightened.
- Manufacturer will not accept liability for injury or damage resulting from incorrect use or installation
- The unit is not intended to operate in loop connection.
- Wall plugs and terminals are not included.
- LED modules are replaced only by the manufacturer.

CAUTION

Wear anti-static gloves before you touch LED systems

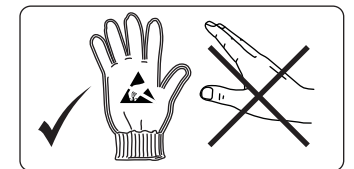

Factory

5 Kefalovrisou Str., Monomati, Acharnai, P.O. Box 13677, Athens, Greece | Tel: (+30) 210 6208 230
E-mail: info@bright.gr | www.bright.gr