

indoor/ plaster, ceramic & concrete



Installation

INPUT
~220-240V

384
208
Cut false ceiling

1 Hold the wooden sticks on the outer side of the fixture by stretching and fitting two rubber bands at the ends of the sticks.

2 Place the fitting in the plasterboard.

3 Fill the gaps on plasterboard.

4 Remove the (x2) wooden sticks and the (x2) rubber bands. Fill the gaps on plasterboard. Then paint.

5


a. Make wiring connections.
b. Place the lamp into the fixture.
c. Place the spring to retain the lamp.

USER INSTRUCTIONS

- The installation of the unit must be done by a qualified electrician.
- The unit must be earthed in case an earth connecting point exists.
- Ensure that the mains is switched off during servicing.
- Do not use bulb(s) bigger than the indicated on units name-plate or packaging.
- Ensure that after the installation, the unit is properly fixed and the cable clamps (if exist) are well tightened.
- Manufacturer will not accept liability for injury or damage resulting from incorrect use or installation
- The unit is not intended to operate in loop connection.
- Wall plugs and terminals are not included.
- LED modules are replaced only by the manufacturer.

CAUTION

Wear anti-static gloves before you touch LED systems

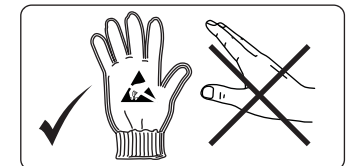

Factory

5 Kefalovrisou Str., Monomati, Acharnai, P.O. Box 13677, Athens, Greece | Tel: (+30) 210 6208 230
E-mail: info@bright.gr | www.bright.gr